 




## KNOW YOUR SPEAKER

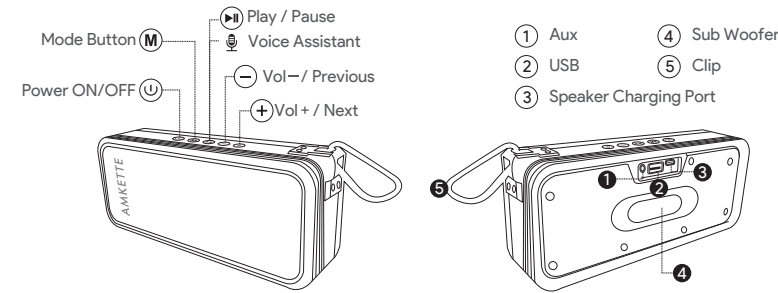

## WHAT'S IN THE BOX




-2-

## GETTING STARTED: CHARGING THE SPEAKER

Charge the speaker before use and keep speaker OFF for faster charging.

- Connect the Micro USB end of the included Micro USB cable to the USB Charging Port of the speaker.
- Connect the standard USB plug end of the cable to a powered USB port on a Desktop / Laptop or any 5V USB AC adaptor (Not included).

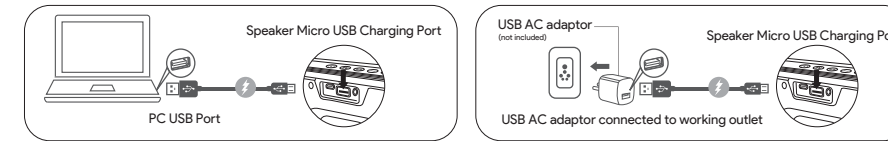

The status indicator light will be solid RED when charging and will turn OFF once fully charged.

## GETTING STARTED: POWER ON / OFF

- Long Press "Power" button for 3 seconds to Power ON the Speaker.
- Long Press "Power" button for 2 seconds to Power OFF the Speaker.



-3-

## BLUETOOTH PAIRING

Bluetooth pairing with Smartphone or Laptop for the first time.



- Turn ON the MAXX speaker.

The status indicator light on the front of the speaker will flash blue indicating the pairing mode.

- "Amkette Boomer MAXX 500" should appear in your device's Bluetooth menu. Select "Amkette Boomer MAXX 500".

When connected the blue LED indicator becomes stable.

Note 1: When the speaker is under Bluetooth mode, it will be connected to the last connected device by default. If you want to connect the speaker to another device you need to disconnect from the original device.

Note 2: Double click Power button to disconnect device.

-4-

## TWS (TWIN SPEAKER PAIRING)



Step 1: Turn ON the Speaker 1 by pressing "Power" button for 5 seconds.

Step 2: Turn ON the TWS functionality of Speaker 1

Short Press and Release (U) and (+) button at the same time to turn ON TWS function of speaker.

The speaker makes a double "beep" sound with blue indicator light flashing quickly, and the speaker opens to TWS function

Step 3: Repeat Steps 1 and 2 for Speaker 2.


If the connection is successful, the blue indicator light of the connected speaker will flash slowly and the blue indicator light of another speaker is ON.

Step 4: Turn ON your Bluetooth device (Smartphone or Laptop) and connect with Amkette Boomer MAXX.

To discontinue the TWS functionality of the speaker short press and release the (U) and (+) button together. You will hear a single beep noise when TWS functionality is discontinued.


-5-

## AUX PLAYBACK

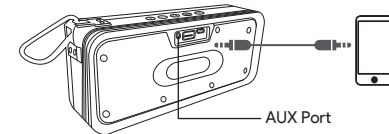

- Simply insert an AUX cable to enable AUX Playback.
- Single press (Volume (U) / (+) button) for Volume Down / Up.
- Single press (Play / Pause (P) button) to Mute the speaker.

## USB PLAYBACK

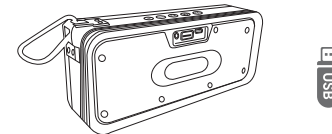

- Simply insert a USB Drive to start listening.
- Single press (Volume (U) / (+) button) for Volume Down / Up
- Long press (Volume (U) / (+) button) for Prev / Next track.
- Single press (Play / Pause (P) button) to pause the speaker.

## MODE SWITCHING

When the speaker is ON, single-click the Mode Button to switch between Bluetooth, USB and AUX modes.

## AUTO OFF

When the speaker is turned ON and there is no connection or operation to 5 min, the speaker will turn OFF automatically.

-6-

## VOICE ASSISTANT ACTIVATION

You can use "Play / Pause" button on your speaker to access the Google Assistant (Android) or Siri (iOS) on your device.

Press "Play / Pause" button for 1 second and release to activate Google / Siri Voice Assistant

You hear a tone that indicates Voice Assistant is active.

Note: The Speaker must be connected to your smartphone via bluetooth for Voice Assistant Activation

### Things to try

"What's the weather?"

"What's trending?"

"Call Mom"

"Set an Alarm for 05:30 AM"

"Set a timer for 5 minutes"

## TROUBLESHOOTING

### The speaker is not working?

- Check if the speaker is turned ON and the volume is adjusted properly.
- Make sure that the device is paired/cable connected and the music source volume is not muted.
- Make sure the speaker is charged.

### Can I use Amkette Boomer MAXX while it is charging?

Yes, you can use your Amkette MAXX while it is charging.

### Can I use FM Radio in Amkette Boomer MAXX?

No, there is no inbuilt FM Radio in the Amkette Boomer MAXX.

-7-

## SPECIFICATIONS

Bluetooth	v5.0	Output	16W (8W x 2)	IPX	YES - IPX 7*	Input Charging Speed	0.75A @ 5V
Input	DC5V-1A	Drivers	52mm Neodymium	Playback Time	up to 16 Hours	Weight	634g
Frequency Response	150Hz-18KHz	Range	Up to 10m	Charging Time	3-5 Hrs	Dimensions	198*51*82mm
Modes	AUX, USB	TWS	YES	Battery Capacity	3000mAh		

NOTE: PLEASE ENSURE THAT THE CHARGING COMPARTMENT COVER IS CLOSED PROPERLY.

## WARRANTY STATEMENT

 
 
 
Amkette Boomer MAXX Bluetooth Speaker is backed by a 1 year performance warranty against any manufacturing defects in material or workmanship from the date of original purchase. This warranty entitles the purchaser to get the product repaired or replaced under the following conditions:

- The warranty applies to the original purchaser. Proof of original purchase is required.
- The warranty does not cover the damage caused by misuse, abuse or improper storage.
- In no event shall Amkette be responsible for any direct, incidental, consequential or other damages of any kind.

Please contact our Technical Support Line and/or send the defective product, postage pre-paid, together with the proof of purchase to our Customer Care Service Center to avail warranty service. Return postage will be paid by us.

### Customer Care Service Center

Amkette House, C-64/4, Okhla, Phase-II, New Delhi-110020



For Hassle Free Service Register Your Product  
[www.amkette.com/register](http://www.amkette.com/register)